




# WILFA PERFORMANCE

COFFEE BREWER WSPL-3B

---

## PRODUCT OVERVIEW

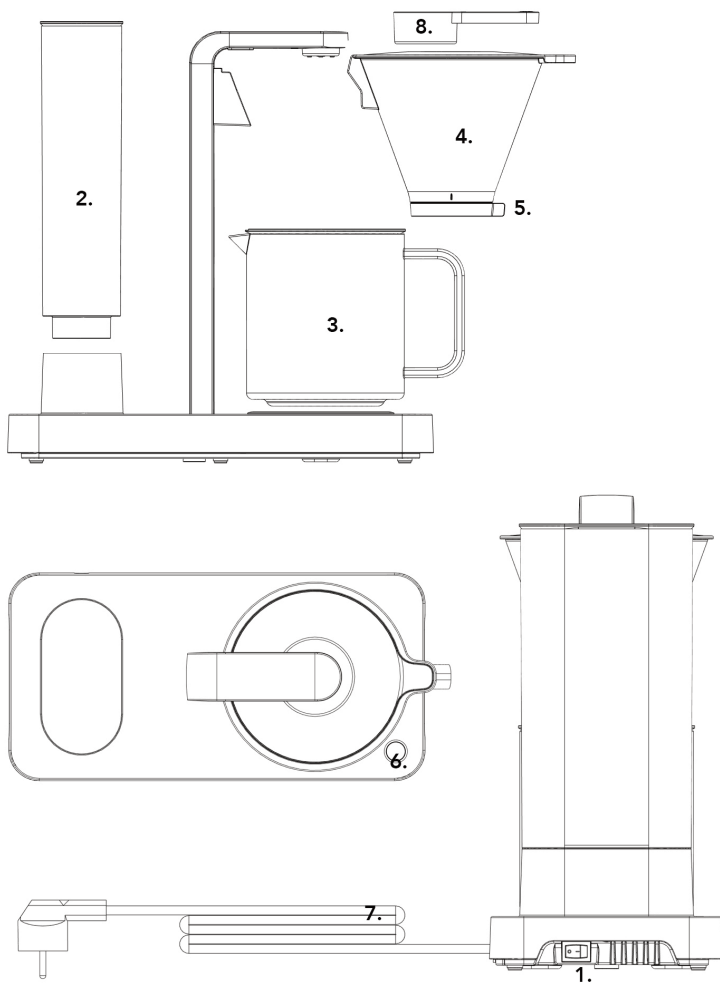

- 1. Power switch
- 2. Removable water tank
- 3. Coffee jug
- 4. Filter basket

- 5. Flow controller
- 6. Start button
- 7. Power cord
- 8. Measuring spoon

## **BEFORE FIRST USE**

Remove and discard all packing materials and clean the product with a dry cloth. Place the coffeemaker on a flat surface and plug the power cord into a 120V outlet.

Turn the power switch on. Start button will blink twice and emit an audible beep. To disinfect, run a full tank of fresh water through the unit without filter or coffee.

## **OPERATION**

Fill the tank to a desired level with fresh water. Please use marks on the side of the tank or coffee jug to guide you. Next, place a #4 paper filter in the filter basket. For best results, use LARDERA #4 filters.

Add a corresponding amount of ground coffee (see suggestions below). Attach the filter basket to bracket and set the flow controller to match the volume of water in the tank.

Press the “start” button to begin the brewing process. The coffeemaker’s pump will begin spraying water atop coffee at a temperature that is optimal from first to last drop.

Once brewed, the heating plate will keep coffee warm for 40 minutes. Press the lit “start” button anytime to turn the coffeemaker off.

Close the flow controller to avoid coffee dripping onto the heating plate.

## COFFEE AMOUNT

Experiment with the ratio of coffee grounds to water to find a taste that is optimal. Please keep in mind that this will vary for different grind sizes and coffee varieties.

As a starting point, we recommend these ratios (and a LARDERA scale to achieve accurate results):

<b>16oz</b>	<b>30g</b>
WATER	COFFEE

<b>24oz</b>	<b>45g</b>
WATER	COFFEE

<b>32oz</b>	<b>60g</b>
WATER	COFFEE

<b>40oz</b>	<b>75g</b>
WATER	COFFEE

### TIPS

- For best results, use freshly roasted, recently ground coffee. Coffee aromas dissipate quickly after beans are ground, so it's best to grind coffee shortly before use.
- The grinder you use has an enormous impact on how well your coffee will taste. For optimum results, consider investing in a quality flat burrs grinder.
- When brewing small amounts, rinse the water jug with hot water prior to use to increase the final temperature of your coffee.

## CLEANING INDICATOR

After 180 brewing cycles, the light on the "start" button will slowly pulsate to indicate that the coffeemaker is due for cleaning.

**The button will pulsate for three brewing cycles before the counter automatically resets.**

## CLEANING

Use LARDERA Cleaning Tablets or other detergents intended to clean coffee equipment. Remove the filter basket, close the flow controller, fill with warm water, and add one cleaning tablet.

Remove the jug, fill with warm water, and add a cleaning tablet. Let both items soak for 30 minutes, then dispose of the cleaning solution and rinse thoroughly to remove any residue.

The filter basket, coffee jug and lid can be washed in hot soapy water or placed in the top rack of dishwasher. The tank may be rinsed with water.

Do not use strong detergents, scouring powders, steel wool or other abrasive elements as these may scratch your appliance.

## DESCALING

Descaling is recommended as needed. In areas with hard water, descaling should be done monthly.

Use LARDERA Descaling Tablets or other descaling detergents. Dissolve one tablet in a water tank filled with 40oz of water and run a brewing cycle without a paper filter or coffee. Once done, run a cycle with a full tank of clean water to wash away any residue of the descaling agent.

## TROUBLESHOOTING

### **COFFEE MAKER DOES NOT START**

Plug the power cord into a power socket. Turn on power switch. Fill the tank with water.

### **COFFEE MAKER STOPS WORKING**

Descale the coffee maker.

### **COFFEE IS NOT HOT ENOUGH**

Preheat the jug with hot water.

### **FILTER BASKET OVERFLOWING**

Open the flow controller and rinse the filter basket with water. Increase the grind setting of your grinder.

## **SAFETY**

- Keep this appliance and its cord out of reach of children.
- Always disconnect the appliance from an outlet if it is left unattended and before cleaning.
- When disconnecting the unit from an outlet, your grip should be on the plug and not the power cord.
- Do not insert or remove the power plug with wet hands.
- Unplug immediately if the unit is damp or wet.
- Keep the product away from hot objects or surfaces.
- The heating plate will stay warm for some time after use.
- Do not use the glass jug on a hotplate or in a microwave oven.
- Do not immerse the appliance in water or liquids.
- Fill tank only with fresh (preferably filtered) water.
- This coffeemaker is intended for household use only. Do not use commercially.
- If the coffeemaker is dropped or is damaged, stop using it immediately.
- If the power cord is damaged, it must be replaced by a qualified technician.
- Do not disassemble the product, as this will invalidate its warranty.

## WARRANTY

This product is covered by a limited warranty that covers manufacturing defects that arise within two years of purchase. A purchase receipt is your proof of coverage.

This warranty is valid for household use only and does not cover commercial use or instances where the product is misused, modified, overloaded, repaired by unauthorized personnel, used negligently or not in accordance with these instructions.

Normal and expected wear is not covered by this warranty.



This product should not be disposed with household waste. To prevent possible harm to the environment or human health, recycle it

---

**LARDERA.COM**

**LARIDEIRA**  
**COFFEE ROASTERS**



NYDALSVEIEN 24  
0484 OSLO | NORGE



170 KIPP AVENUE,  
ELMWOOD PARK NJ 07407