




UNIFORM

COFFEE GRINDER

WSFB-100S

LARDER
COFFEE ROASTERS

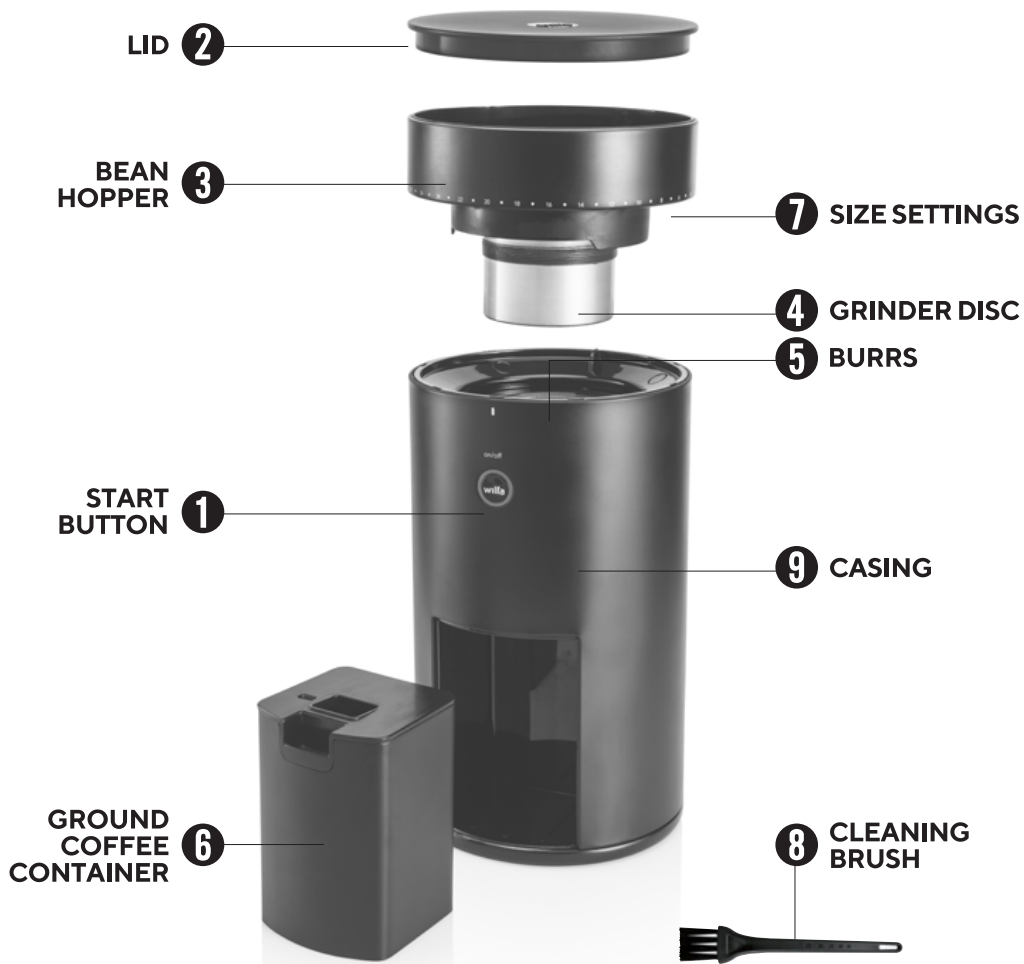

BEFORE FIRST USE

Remove and discard all packing materials and clean the product with a dry cloth. Place the grinder on level surface and plug the power cord into 120V outlet. The light will glow white for two seconds, then turn off.

As a safety precaution, the grinder will not operate if the bean hopper ❸ has not been properly locked into position. Please do not place more than 75 grams of coffee into the beans hopper ❸ as this will exceed the 75g maximum capacity of the ground coffee container ❹.

SELECTING YOUR GRIND SIZE

The optimal grind size differs for each style of coffee. Rotate the bean hopper ❸ to a desired grind size position.

Experiment with different grind settings to achieve a brew that best suits your taste. We recommend these ranges as your starting point:

BREW METHOD	ESPRESSO	AEROPRESS	POUR OVER	FILTER	FRENCH PRESS
GRIND SETTING	3-7	14-26	14-28	22-32	30-38

COFFEE GRINDING OPERATION

To grind beans, press and release the start button **1**. The light will glow white. The grinder will stop automatically once all the beans are ground and light will pulse to signal completion.

To cancel mid-grind, press the start button once more. The grinder will stop and the light will turn off.

MAINTENANCE AND CLEANING

The device may clog when grinding for espresso at the finest setting. If this happens, set grinder to a coarser setting (such as 25) and let the burrs grind out the blocking residue.

Once cleared, the grinder is again ready to grind for espresso.

To clean the grinder, always use a dry cloth. Never use water or chemical cleaning agents.

TROUBLESHOOTING

COFFEE GRINDER DOES NOT START

Plug power cord into power socket and rotate the bean hopper into locked position.

COFFEE GRINDER CLOGS

Using setting 1-4 might clog the burrs. Set grinder to 25 and gradually adjust back to the desired setting with beans in the hopper and the motor running.

GRINDS ARE COARSE EVEN AT FINEST SETTINGS

Bean hopper not fully rotated. Rotate the bean hopper one more revolution.

IT'S HARD TO REACH FINER SETTINGS

Coffee beans might be stuck between burrs. Run the grinder while adjusting its settings.

SAFETY

- Keep the appliance and its cord out of reach of children.
- Always disconnect the appliance from the supply if it is left unattended and before cleaning.
- When disconnecting the unit from the power supply, your grip should be on the plug and not the power cord.
- Do not insert or remove the power plug with wet hands.
- Keep the product away from hot objects or surfaces.
- Never immerse in water or liquids.
- The grinder is only intended for the purposes described in this manual.
- If the grinder is dropped or is damaged, stop using it immediately.
- If the supply cord is damaged, it must be replaced by a qualified technician.
- Do not disassemble the product, as this will invalidate its warranty.

WARRANTY

This product is covered by a limited warranty that covers manufacturing defects that arise within two years of purchase. A purchase receipt is your proof of coverage.

This warranty is valid for household use only and does not cover commercial use or instances where the product is misused, modified, overloaded, repaired by unauthorized personnel, used negligently or not in accordance with these instructions.

Normal and expected wear is not covered by this warranty.



This product should not be disposed with household waste. To prevent possible harm to the environment or human health, recycle it

LARDERA.COM

LARDERA
COFFEE ROASTERS



NYDALSVEIEN 24
0484 OSLO | NORGE



170 KIPP AVENUE,
ELMWOOD PARK NJ 07407